

# Container Rig 20'/10'

## Short side

Art.no. 3085340



**ELEIKO**

# READ BEFORE INSTALLATION AND USE

## CAUTION

The equipment must be installed and used in a place whose access and supervision are specifically controlled by the owner.

Be sure to install the equipment on a stable base and properly level the equipment. ELEIKO recommends that all equipment is secured to floor and installed by a licensed contractor or an ELEIKO-installer.

## SAFETY INSTRUCTIONS

It is the responsibility of the purchaser of ELEIKO products to instruct all users and supervising personnel on proper usage of the equipment.

1. All included warnings (labels) and instructions **MUST** be read before the use of any ELEIKO-equipment. Use each equipment as it is intended for.
2. A user **MUST** get a medical examination and proper instructions before the use of any ELEIKO-equipment.
3. **DO NOT** let anyone, under any circumstances, use equipment that appears to be damaged. Do not try to repair any equipment before consulting an ELEIKO technician.
4. **DO NOT** replace the components of ELEIKO-equipment with other none ELEIKO-equipment (magnetic safety pin, frames, bars), do not improvise. If there are any doubts consult an ELEIKO representative prior to any intervention.
5. **DO NOT** overload the equipment and **DO NOT** try to exceed personal strength levels.
6. Children under the age of 14 must be supervised by an adult.
7. **DO NOT** remove any safety labels from the ELEIKO-equipment. ELEIKO is not responsible if a label is removed. Replace damaged labels immediately.
8. Eleiko package for products can be made of wood, be aware of splinters, **MUST** use gloves and proper work wear.
9. Eleiko package material could be a risk when handling, be aware of crushing, **MUST** use work wear including gloves and hard shoes.
10. Eleiko products and packing material is heavy, **MUST** use proper lifting technique, work wear and hard shoes.

## PREVENTITIVE MAINTENANCE & INSPECTIONS .

### REGULARLY:

Clean the surfaces on frames and tubes from dust and dirt.

Check that all bolts between parts, walls, floors are properly tightened, according to recommendations.

Check equipment for sharp edges and replace if necessary.

Check tubes and welds for cracks or other defects, replace if necessary.

## WARRANTY

All products manufactured by ELEIKO are warranted to the original purchaser to be free from defects in workmanship and / or materials under normal use or service as follows:

10 years on welds on structural frame (NOT on moving parts)


Normal wear and tear does not fall under the warranty of two years.

# PRODUCT SPECIFICATIONS


Rig suspension assembled on a container

Product weight	35 kg / 77 lbs
Dimensions (L x W x H)	7360 - 7980x2510x2780 mm 288" - 314"x99"x109,5"


## FOOTPRINT AREA

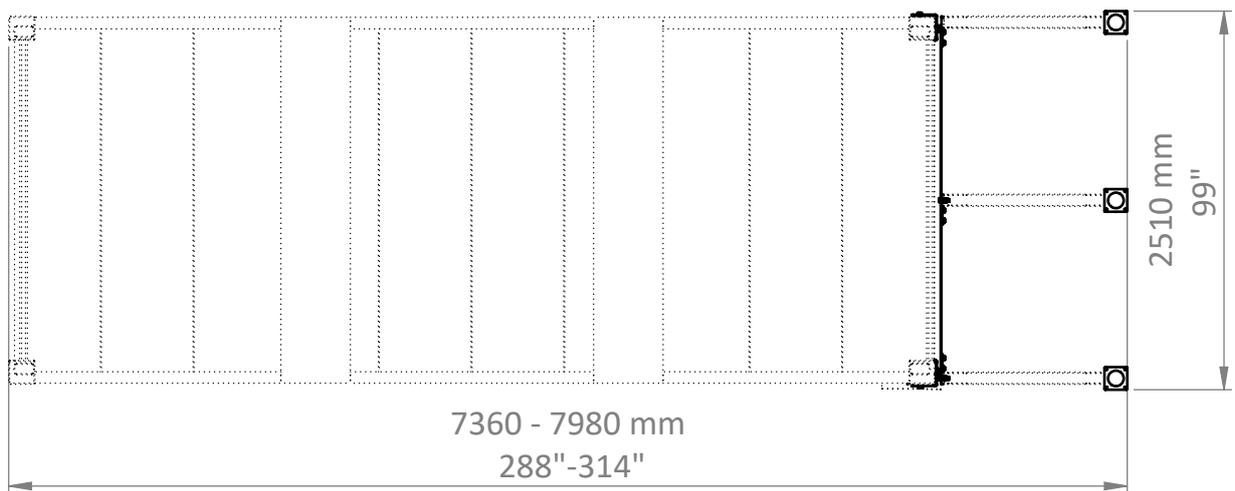


# CONTENTS

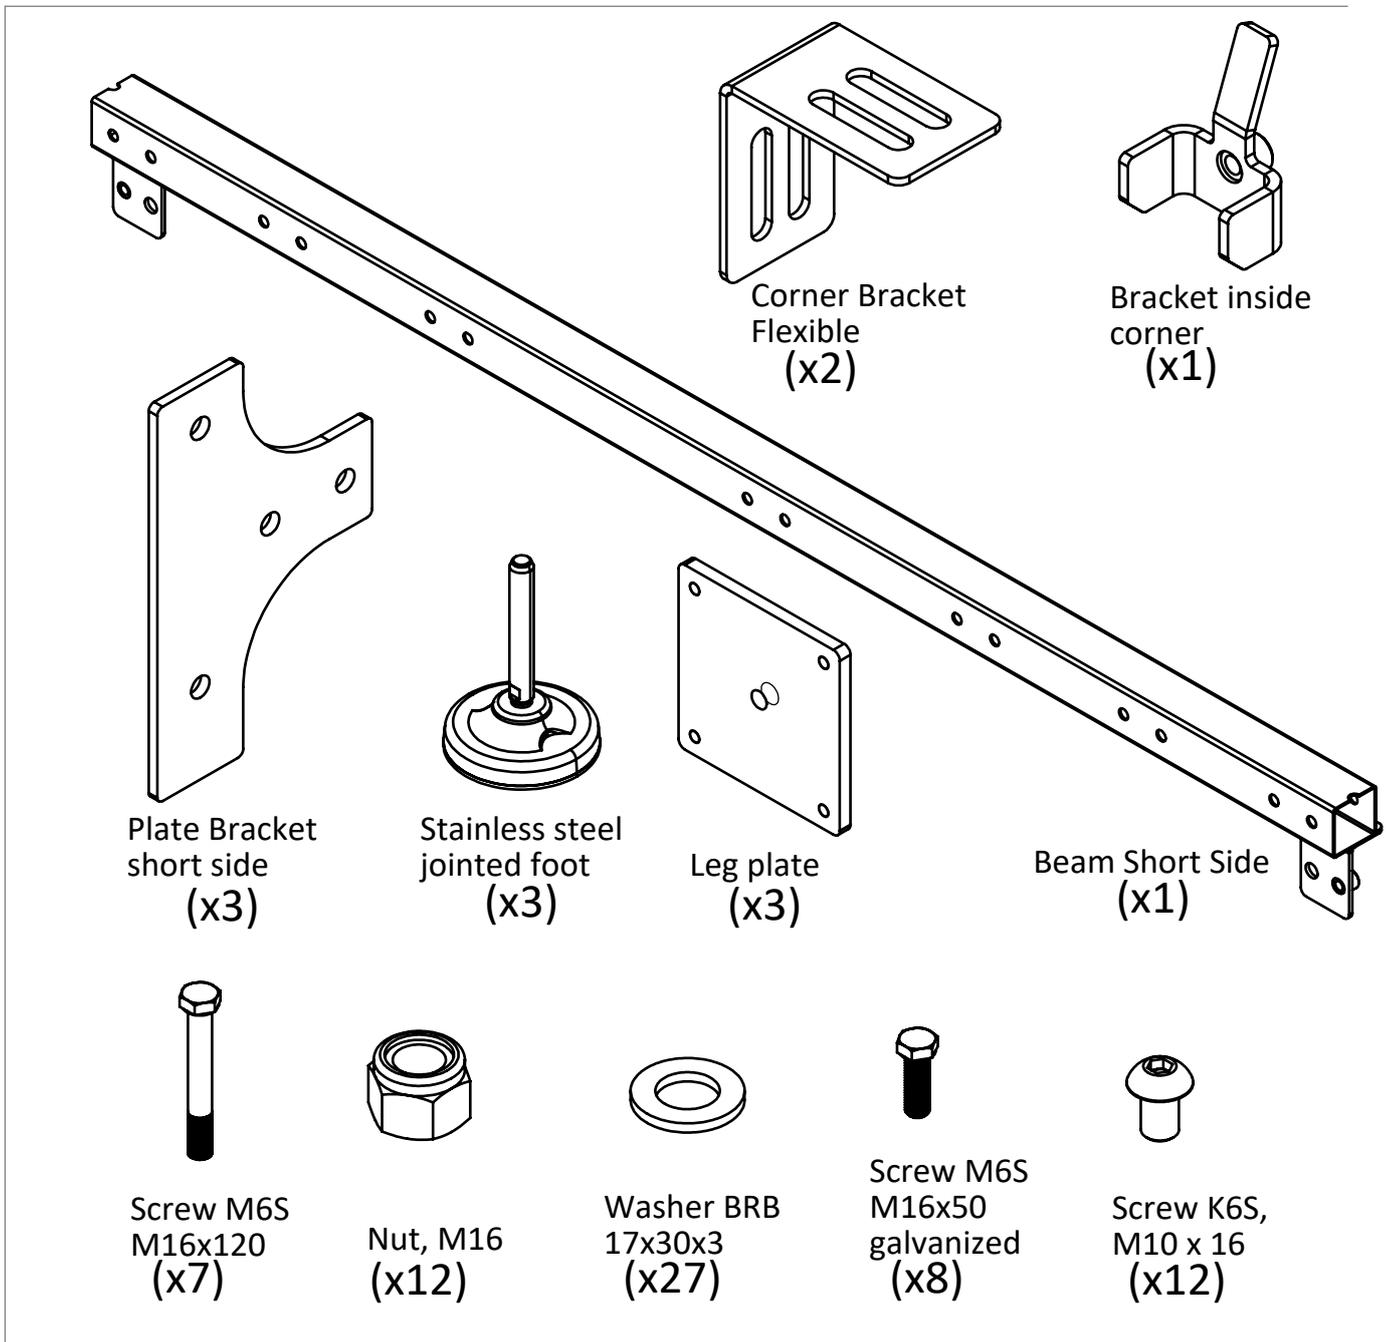


## REQUIRED TOOLS

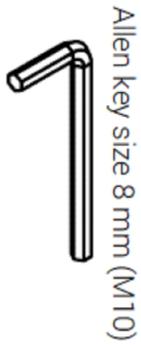

x2

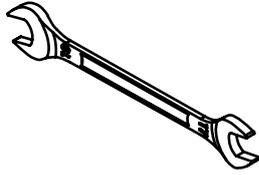

Spanner 24 mm

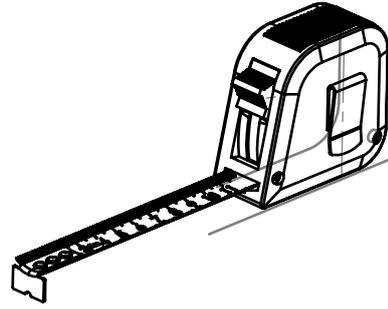

Measuring tape

## GENERAL

The table below is general torque to use for different threads. Use these torques, if nothing else is set. Below numbers are for screw/nut of quality 8.8.

THREAD	TORQUE (Nm / ftlb) Quality 8.8
M10	47 / 34,7
M16	60 / 44

# ASSEMBLY INSTRUCTIONS

1.

Screw M6S  
M16x120  
(x1)


Screw M6S  
M16x50  
galvanized  
(x1)

Washer BRB  
17x30x3  
(x2)


Beam  
Short Side  
(x1)

Corner Bracket  
Flexible  
(x1)


Bracket inside  
corner  
(x1)

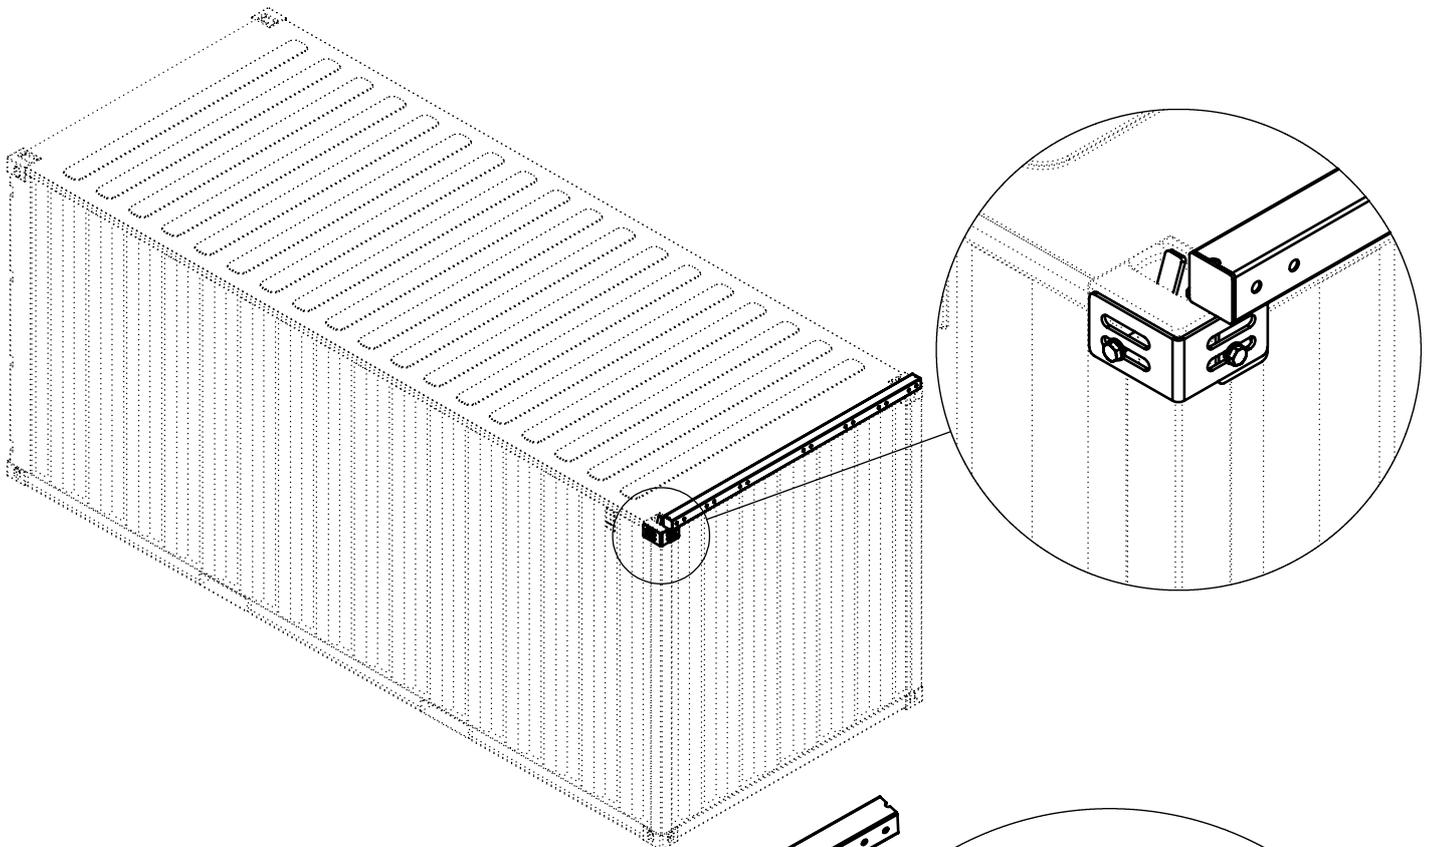

Center the beam  
in the middle of  
the container, use  
Measuring tape.

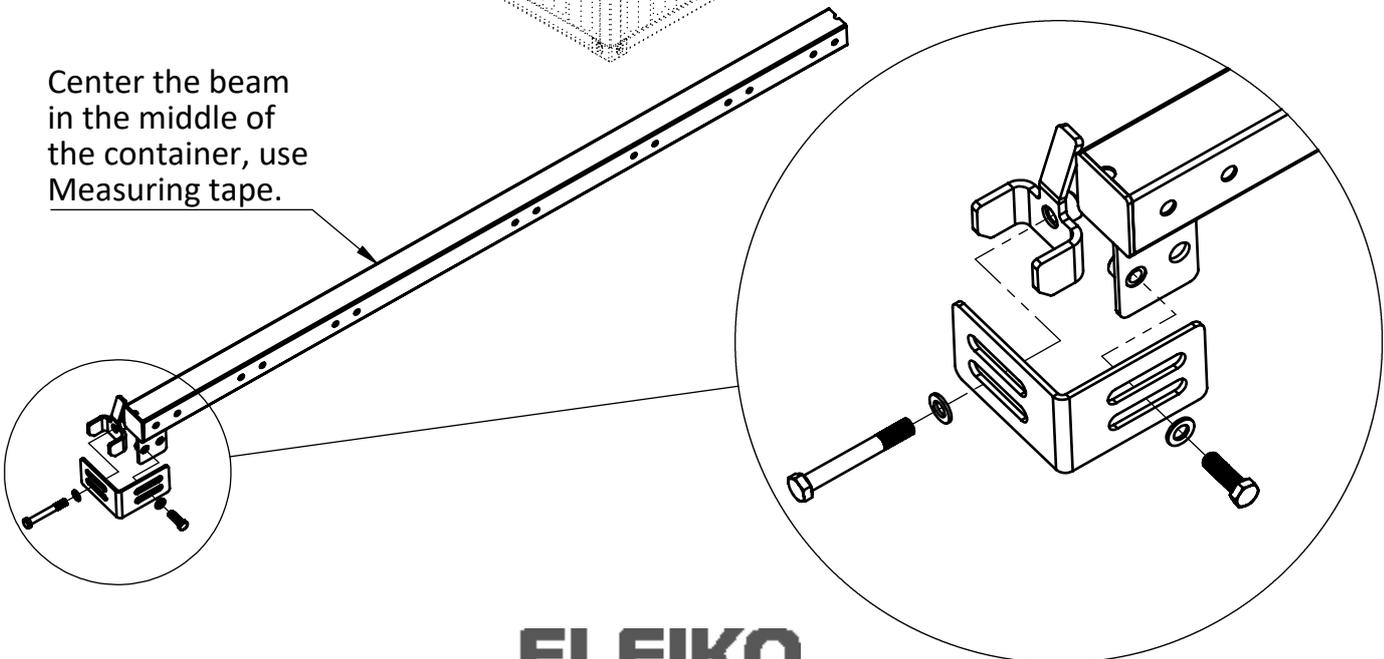


2.

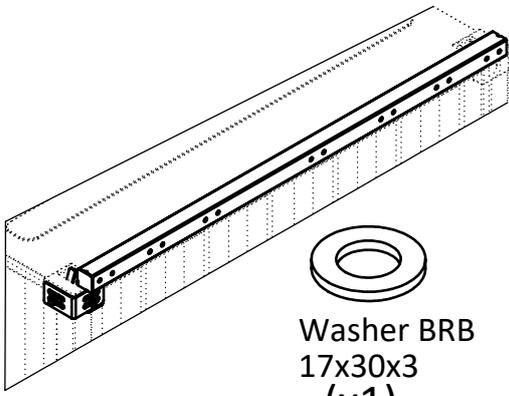


Washer BRB  
17x30x3  
(x1)



Screw M6S  
M16x50  
galvanized  
(x1)

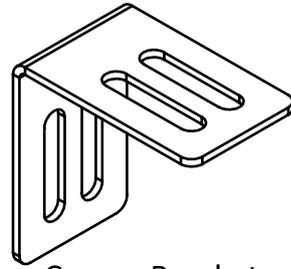


Corner Bracket  
Flexible  
(x1)

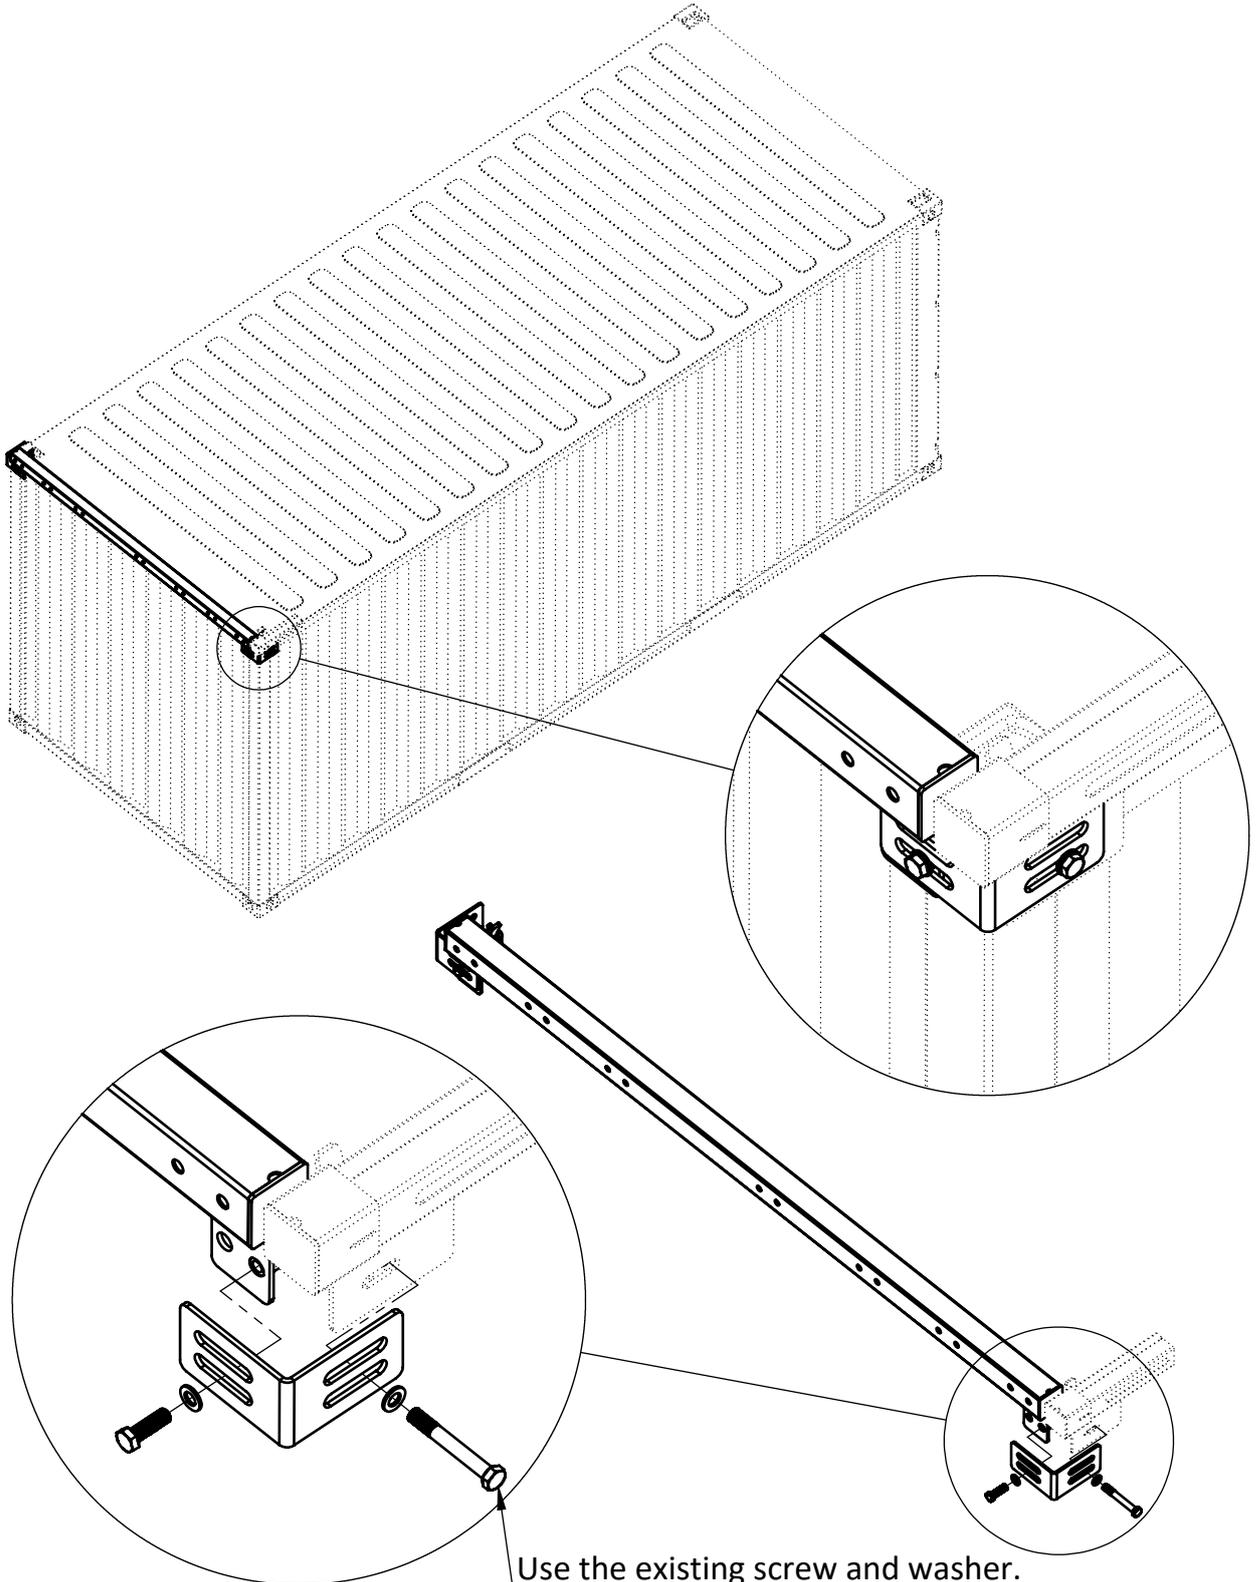

Use the existing screw and washer.

3.

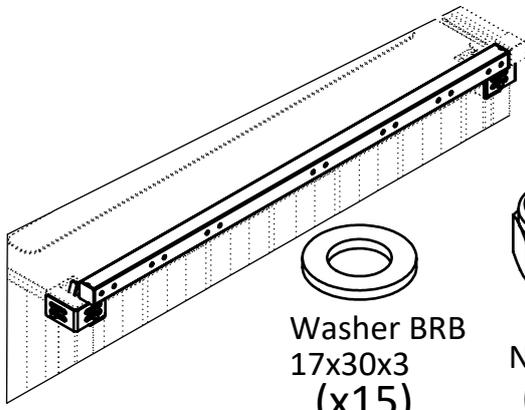



Washer BRB  
17x30x3  
(x15)

Nut, M16  
(x6)


Screw M6S  
M16x120  
(x6)

Plate Bracket  
short side  
(x3)

Screw M6S  
M16x50  
galvanized  
(x3)

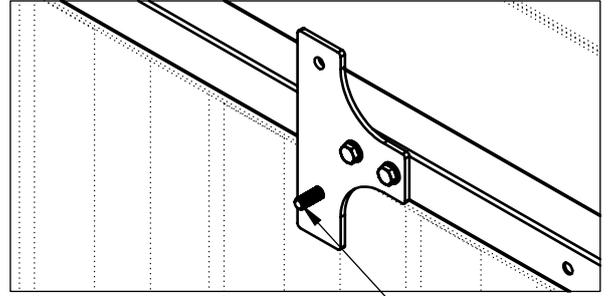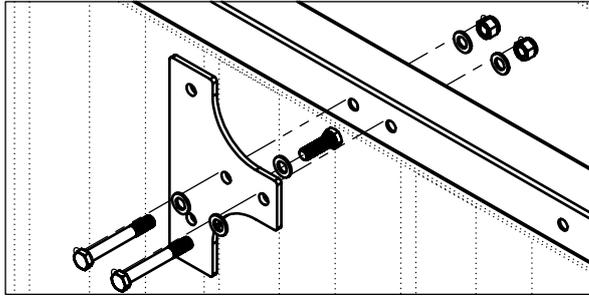


Option 1.

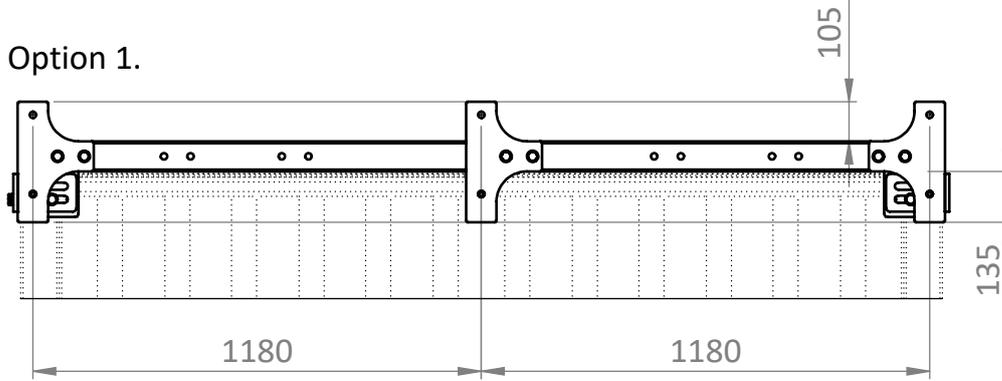


Assemble the screw M16x50 + washer. The screw will be used later on for rig parts.



Option 2.

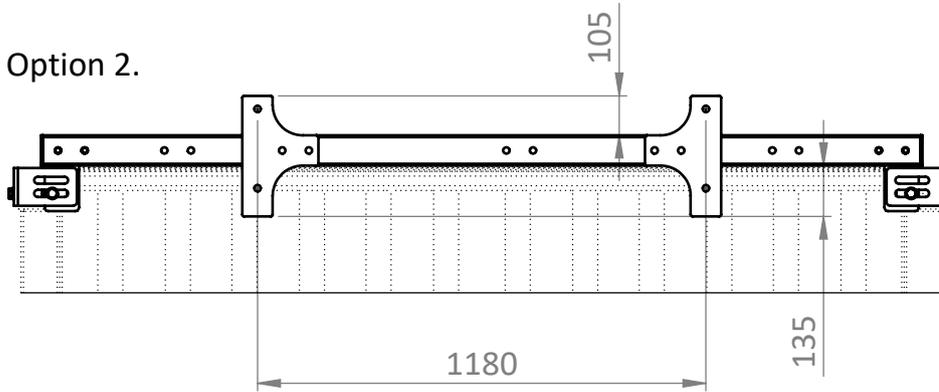

Option 3.

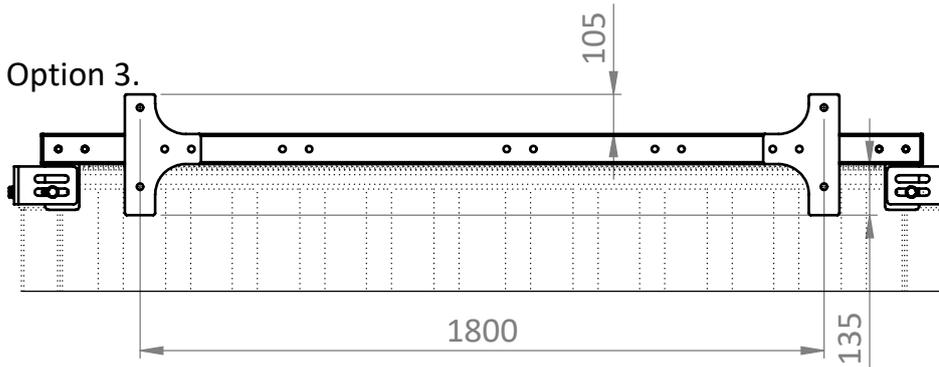

4.

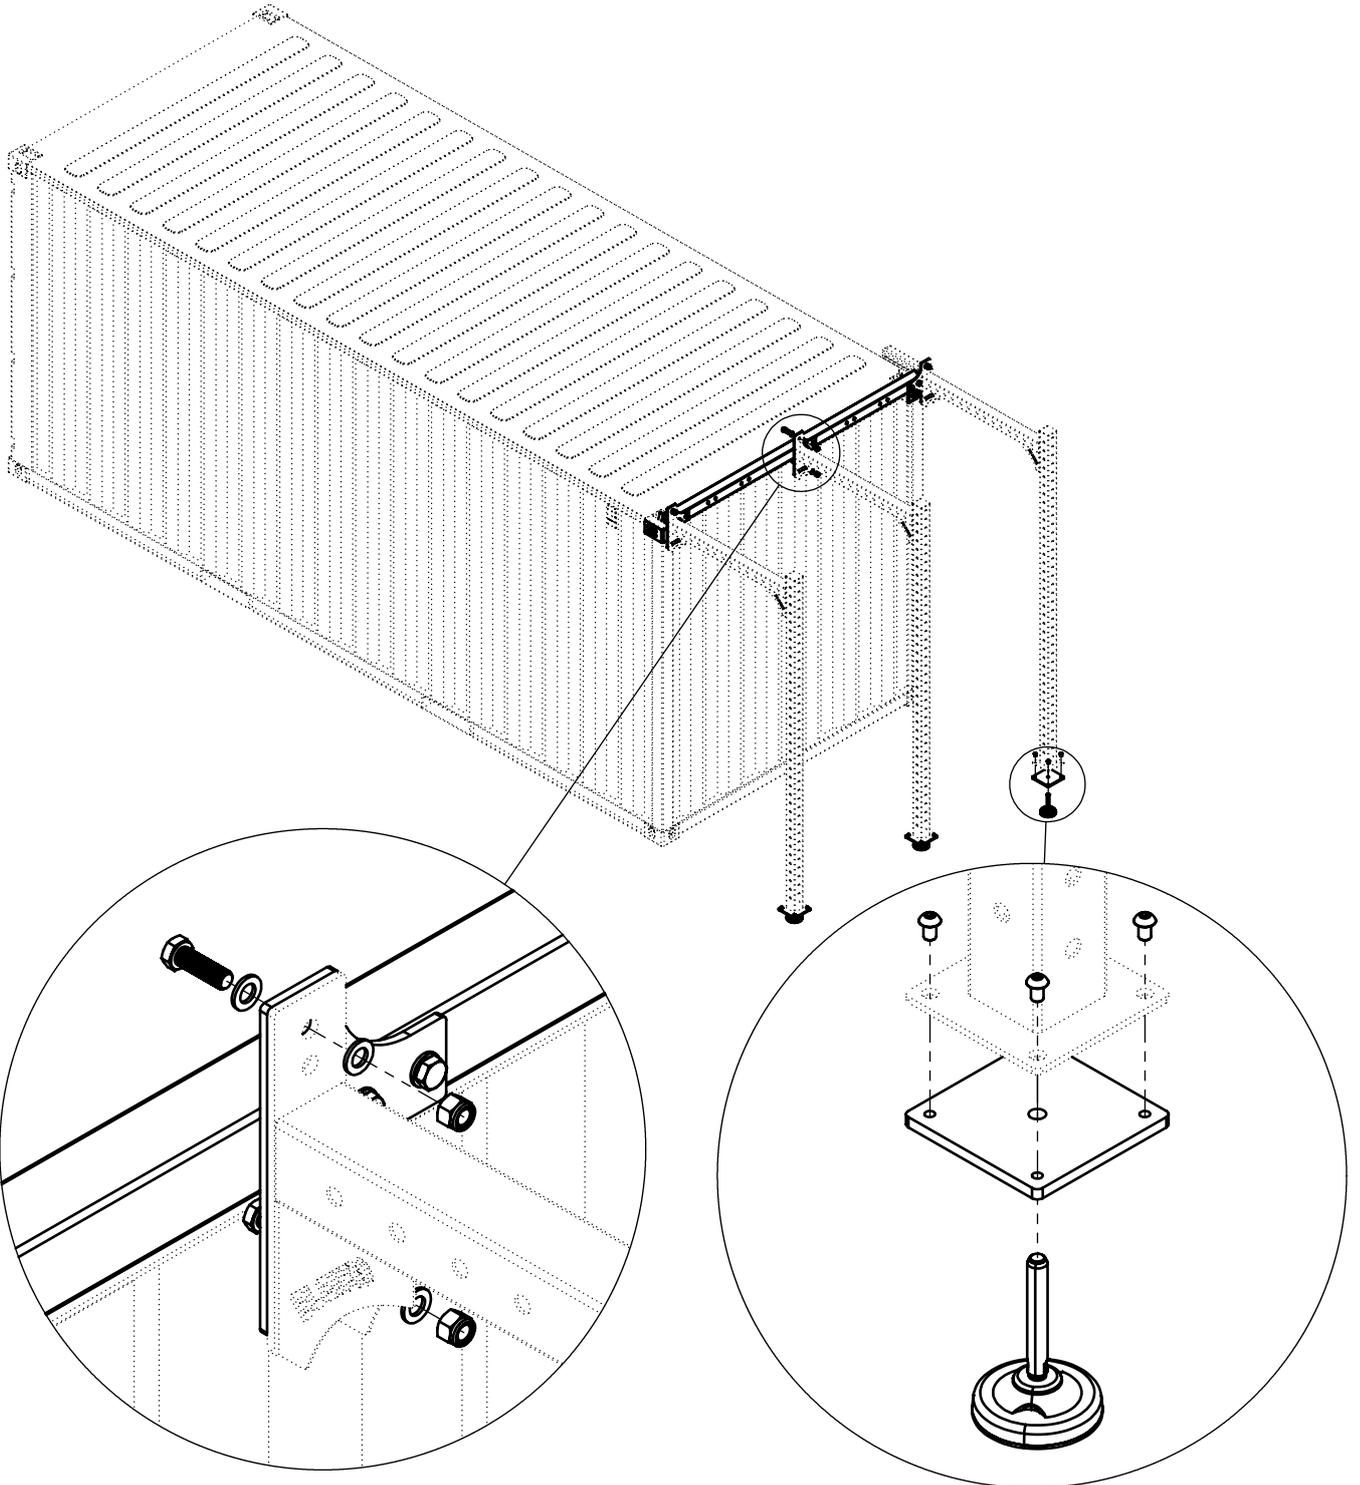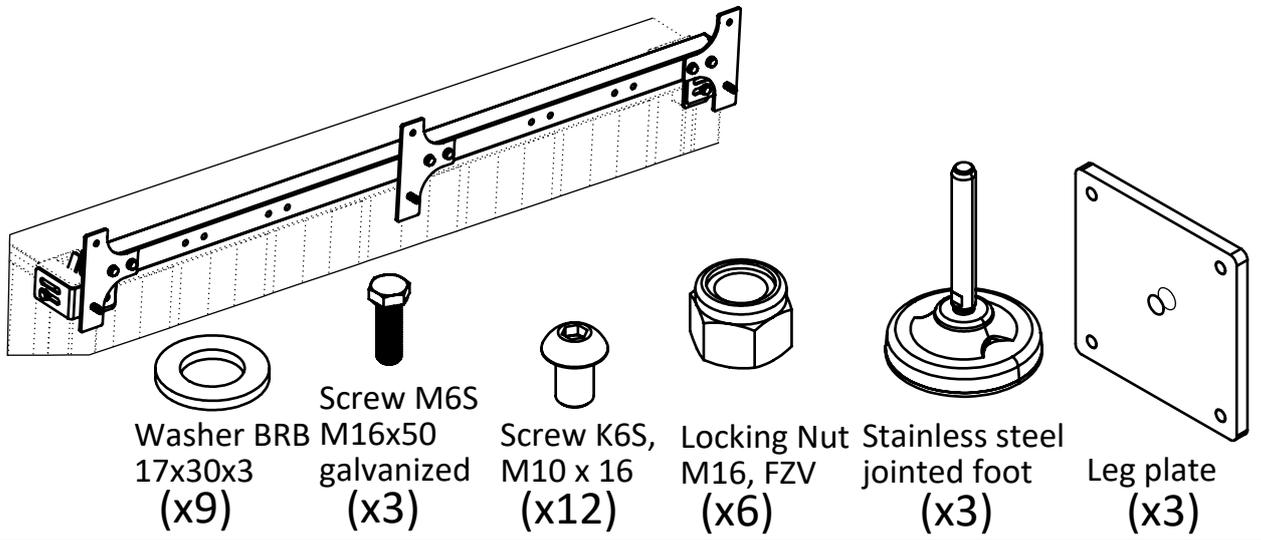

The height of all Jointed feet needs to be adjusted according to ground level.



# ELEIKO

RAISE THE BAR

Eleiko Group AB | Klastorpsvägen 18 | SE-302 62 HALMSTAD | Sweden  
E-mail: [info@eleiko.com](mailto:info@eleiko.com) | Phone: +46 35 17 70 70

[www.eleiko.com](http://www.eleiko.com)