


Container Storage

Art.no. 3085349

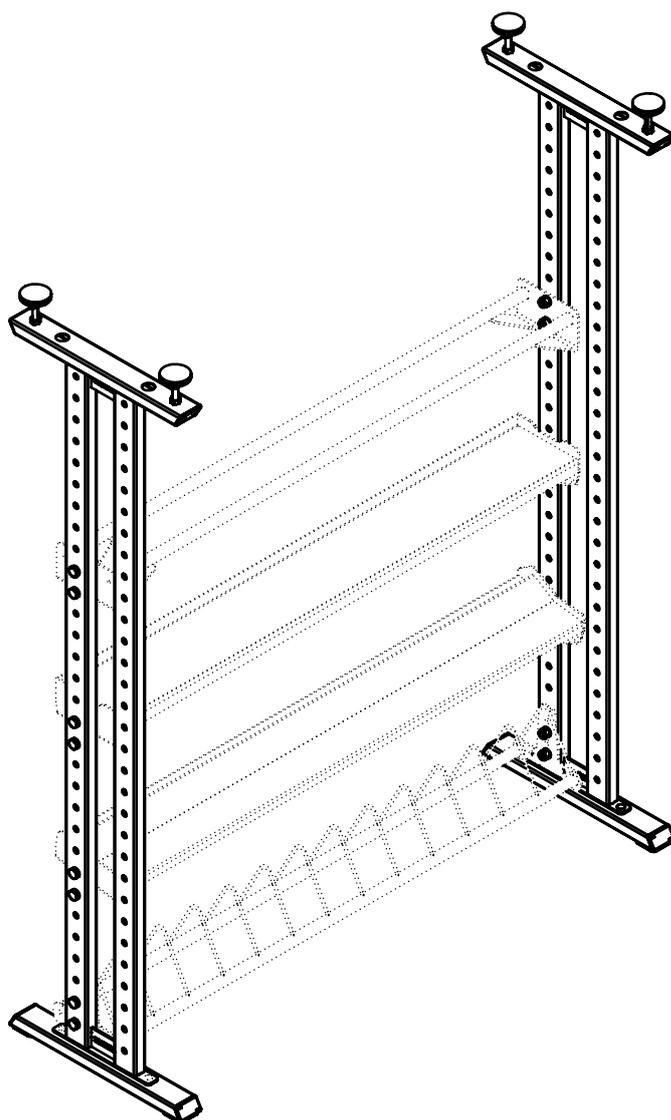

ELEIKO

READ BEFORE INSTALLATION AND USE

CAUTION

The equipment must be installed and used in a place whose access and supervision are specifically controlled by the owner.

Be sure to install the equipment on a stable base and properly level the equipment. ELEIKO recommends that all equipment is secured to floor and installed by a licensed contractor or an ELEIKO-installer.

SAFETY INSTRUCTIONS

It is the responsibility of the purchaser of ELEIKO products to instruct all users and supervising personnel on proper usage of the equipment.

1. All included warnings (labels) and instructions **MUST** be read before the use of any ELEIKO-equipment. Use each equipment as it is intended for.
2. A user **MUST** get a medical examination and proper instructions before the use of any ELEIKO-equipment.
3. **DO NOT** let anyone, under any circumstances, use equipment that appears to be damaged. Do not try to repair any equipment before consulting an ELEIKO technician.
4. **DO NOT** replace the components of ELEIKO-equipment with other none ELEIKO-equipment (magnetic safety pin, frames, bars), do not improvise. If there are any doubts consult an ELEIKO representative prior to any intervention.
5. **DO NOT** overload the equipment and **DO NOT** try to exceed personal strength levels.
6. Children under the age of 14 must be supervised by an adult.
7. **DO NOT** remove any safety labels from the ELEIKO-equipment. ELEIKO is not responsible if a label is removed. Replace damaged labels immediately.

PREVENTITIVE MAINTENANCE & INSPECTIONS .

REGULARLY:

Clean the surfaces on frames and tubes from dust and dirt.

Check that all bolts between parts, walls, floors are properly tightened, according to recommendations.

Check equipment for sharp edges and replace if necessary.

Check tubes and welds for cracks or other defects, replace if necessary.

WARRANTY

All products manufactured by ELEIKO are warranted to the original purchaser to be free from defects in workmanship and / or materials under normal use or service as follows:

10 years on welds on structural frame (NOT on moving parts)


Normal wear and tear does not fall under the warranty of two years.

PRODUCT SPECIFICATIONS


Rig suspension assembled on a container

Product weight	31 kg / 68 lbs
Dimensions (L x W x H)	640x85x2360 25"x3,3"x93"


FOOTPRINT AREA

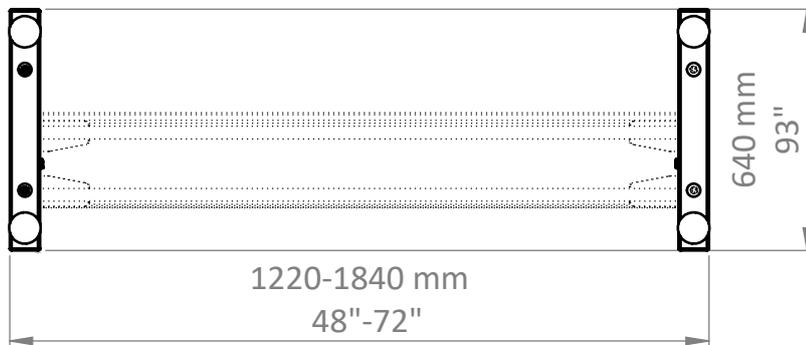

CONTENTS

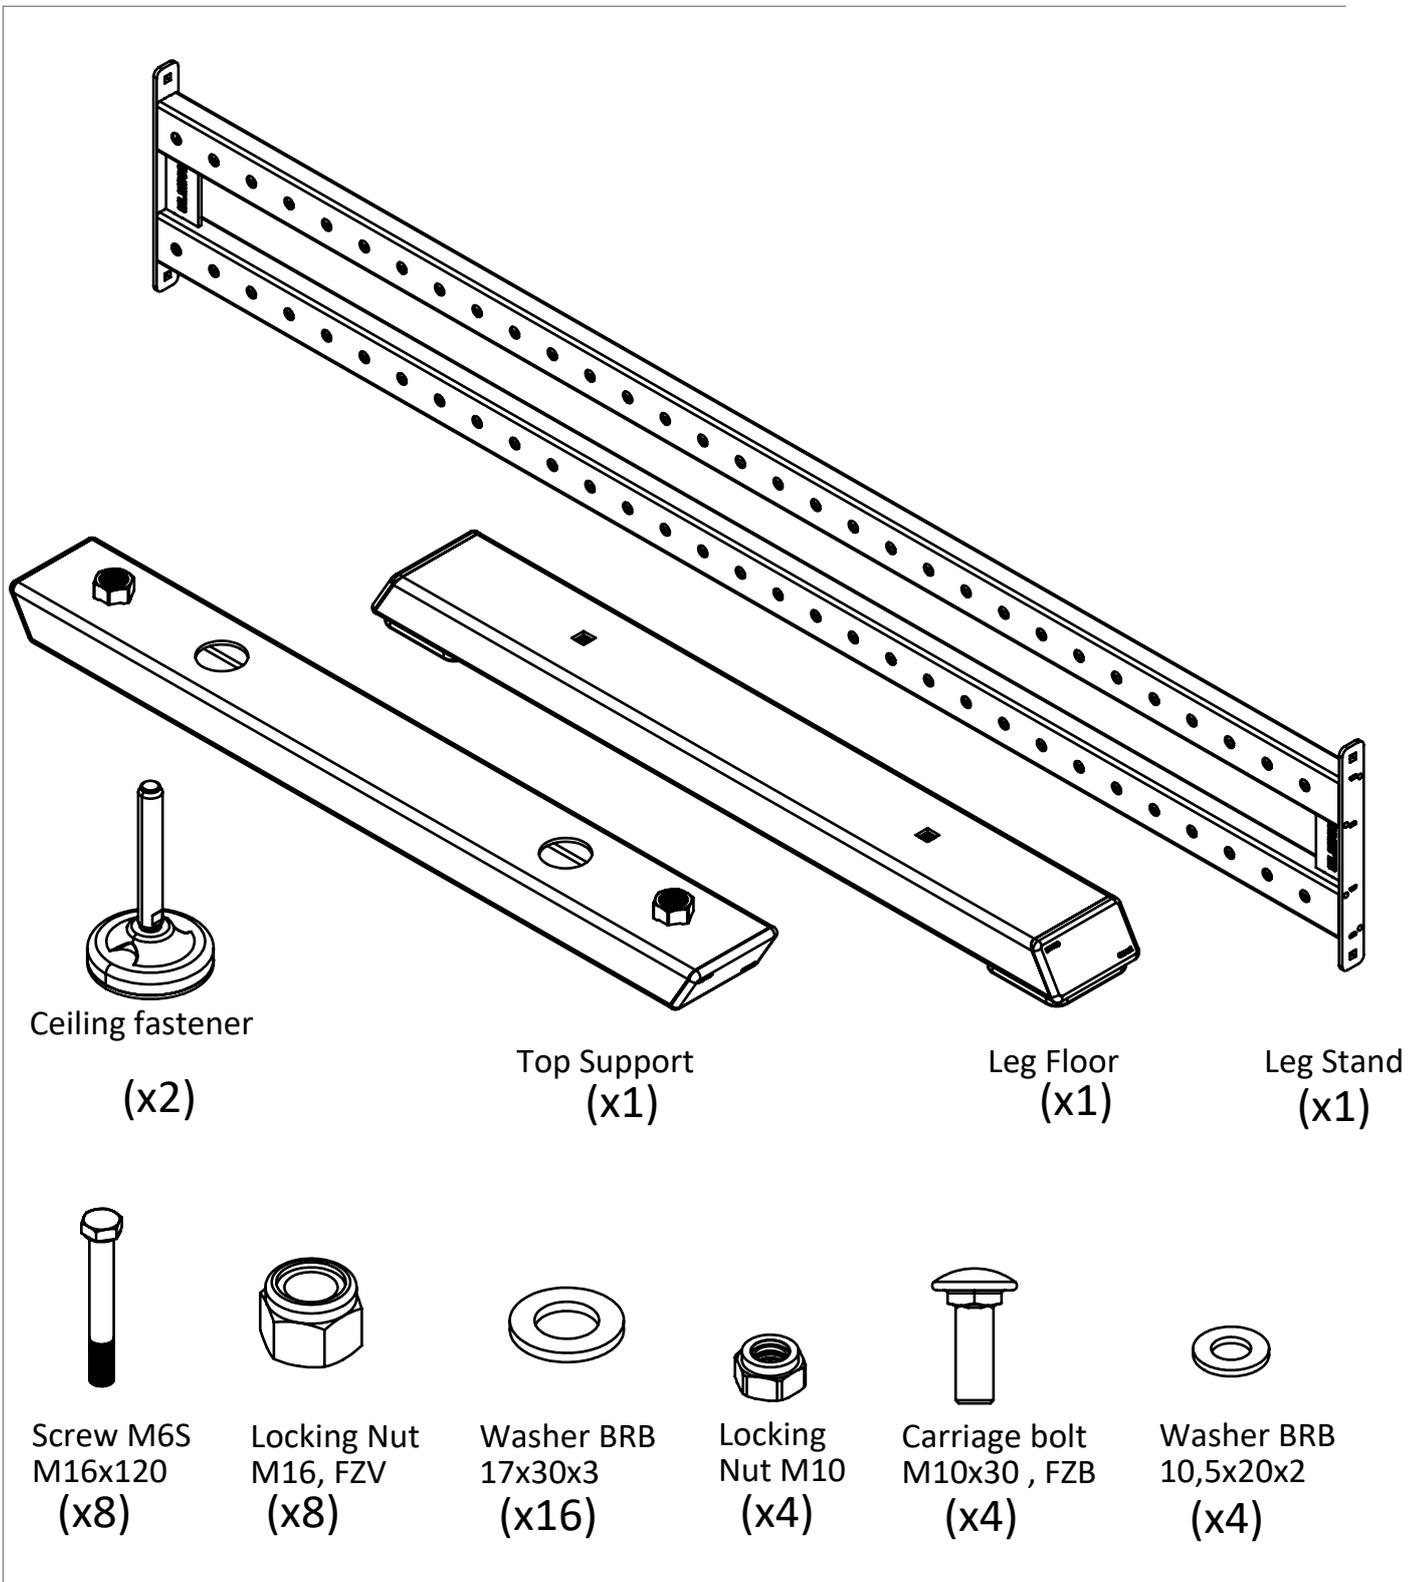

REQUIRED TOOLS

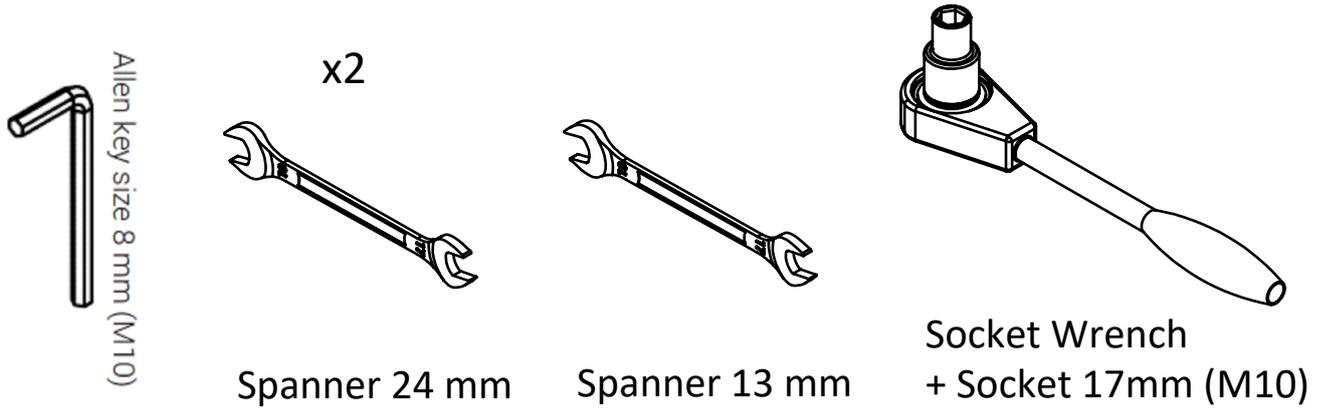


GENERAL

The table below is general torque to use for different threads. Use these torques, if nothing else is set. Below numbers are for screw/nut of quality 8.8.


THREAD	TORQUE (Nm / ftlb) Quality 8.8
M10	47 / 34,7
M16	60 / 44

ASSEMBLY INSTRUCTIONS

1.

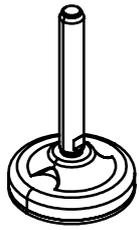


Ceiling fastener
(x2)

 


Carriage bolt
M10x30, FZB
(x4)



Locking
Nut M10
(x4)

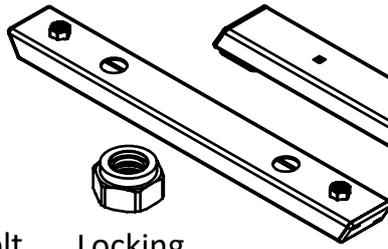


Top Support
(x1)

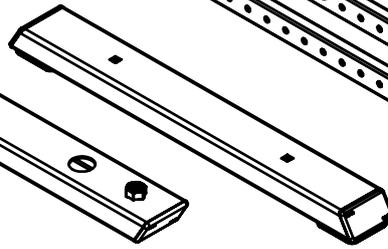


Leg Floor
(x1)



Washer BRB
10,5x20x2
(x4)

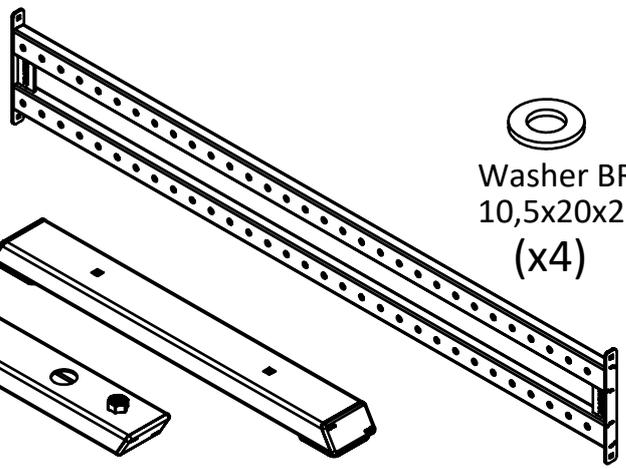


Leg Stand
(x1)

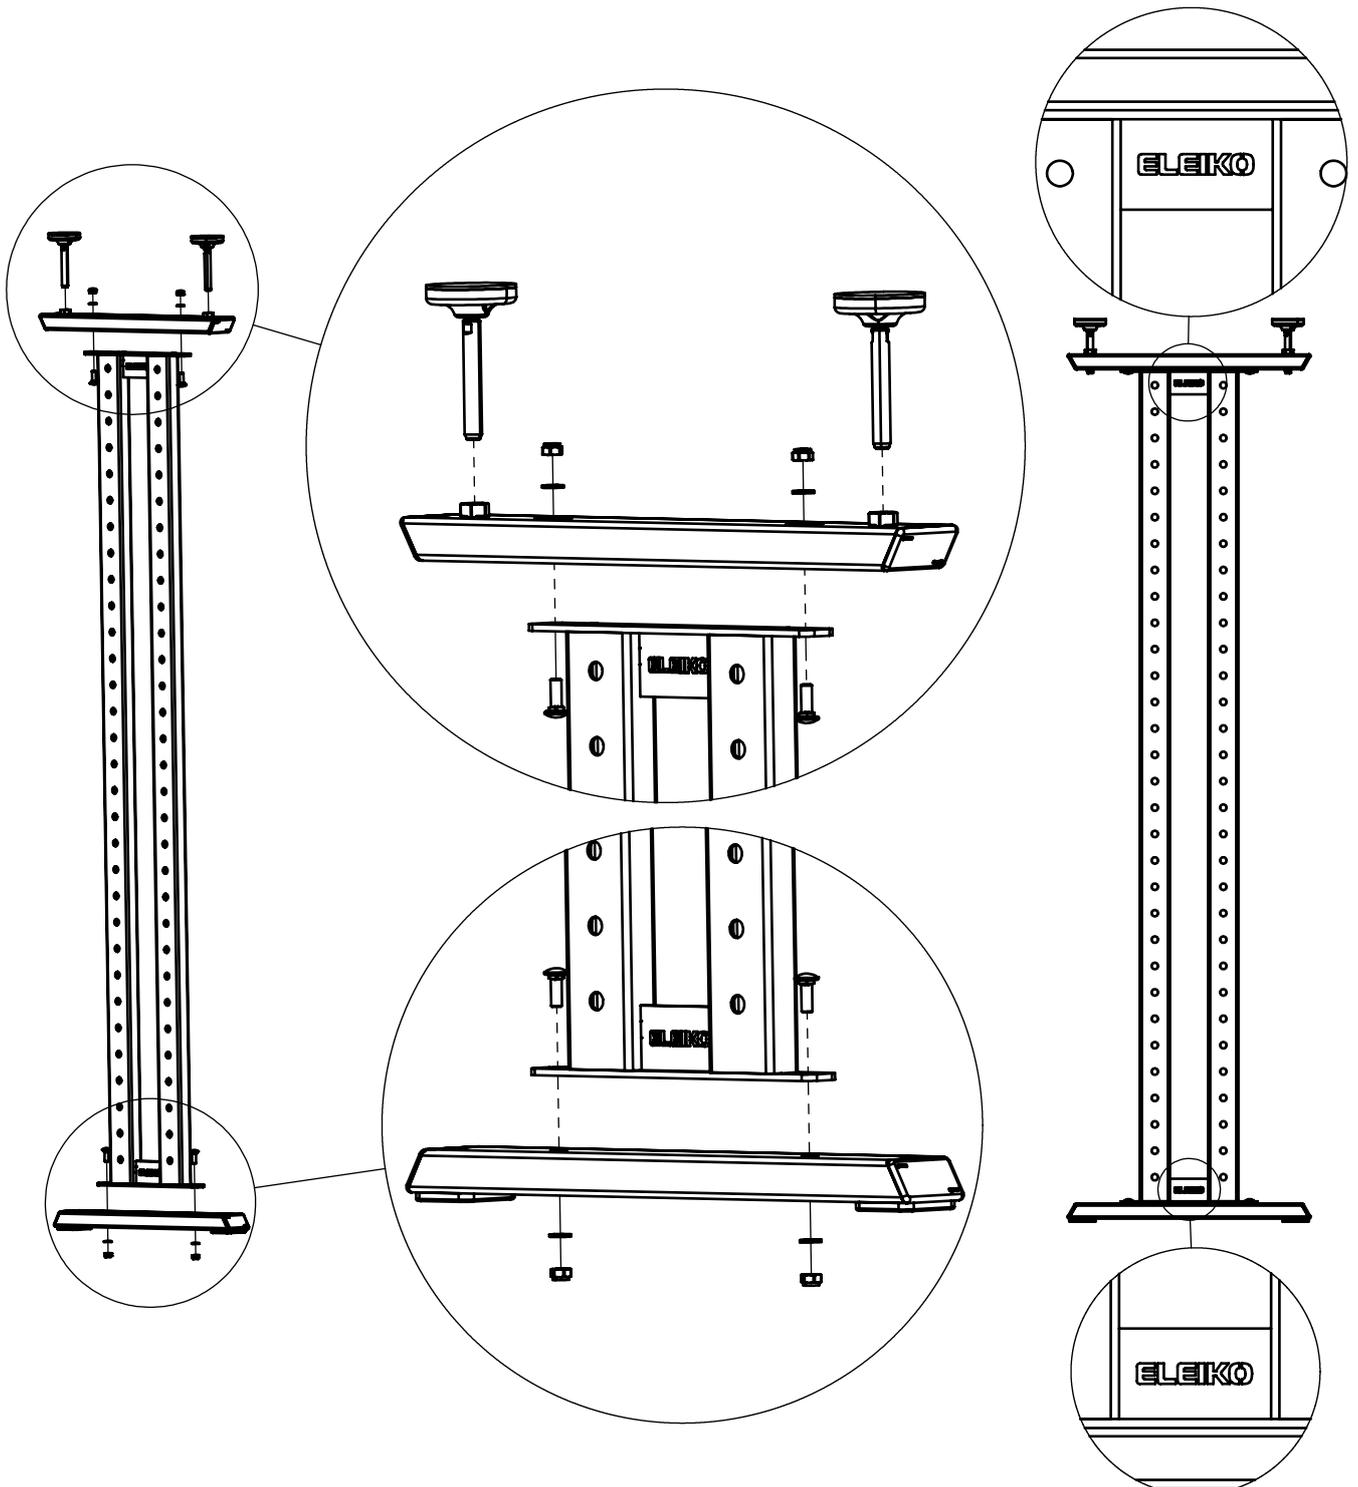

ELEIKO

Make sure the logo ends up in right direction.


2.

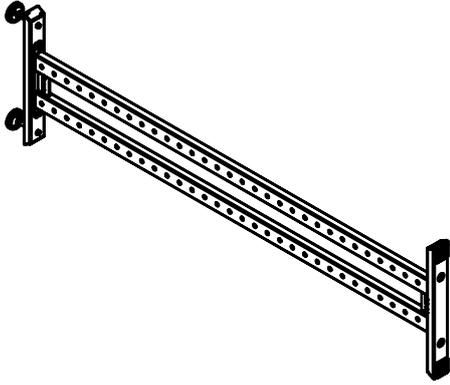


Screw M6S
M16x120
(x8)



 Locking Nut
M16, FZV
(x8)




Washer BRB
17x30x3
(x16)

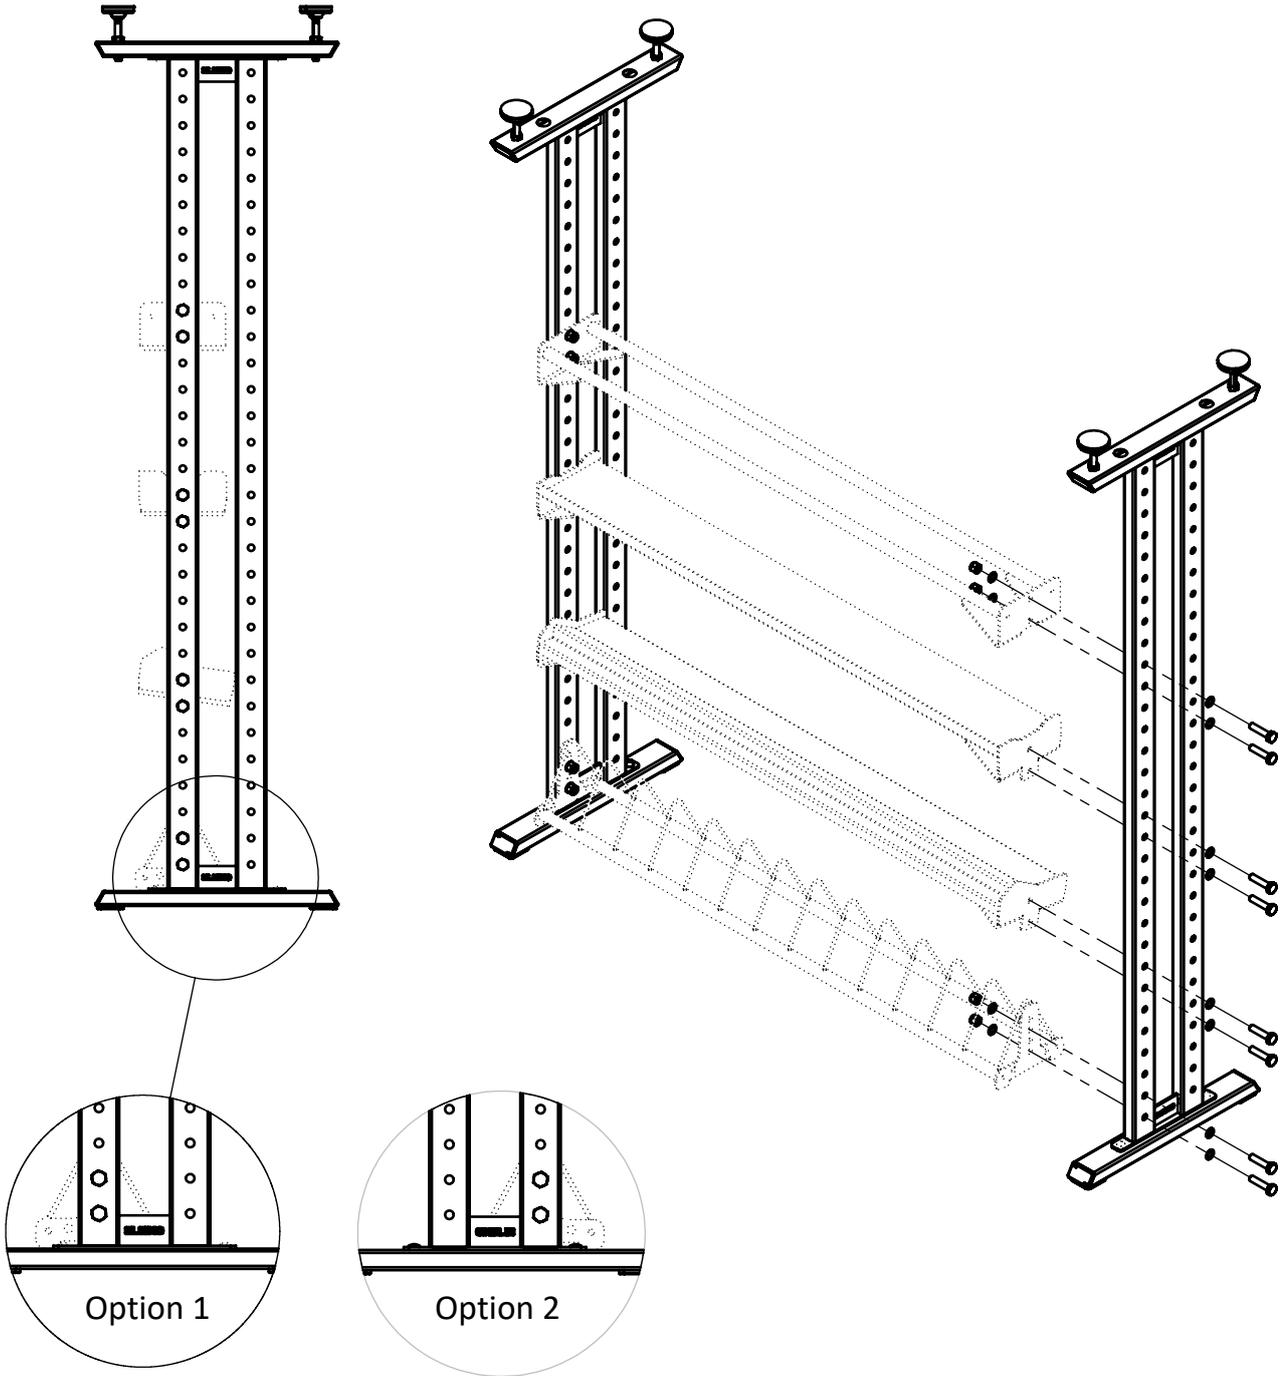


These different shelves can be attached in both options 1 and 2, for best access.

3.

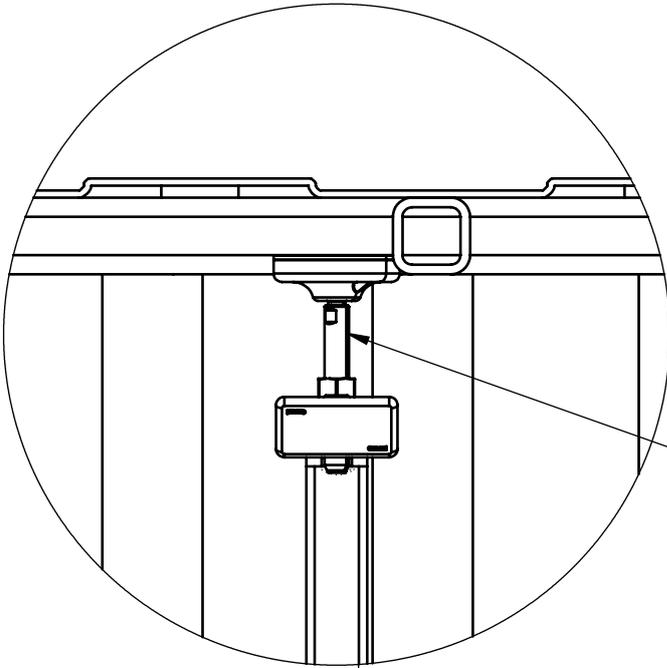

Tighten the screw (Ceiling fastener) to the container ceiling.

Some containers have uneven roof and may cause the ceiling fasteners to be at an angle. This is an OK position.

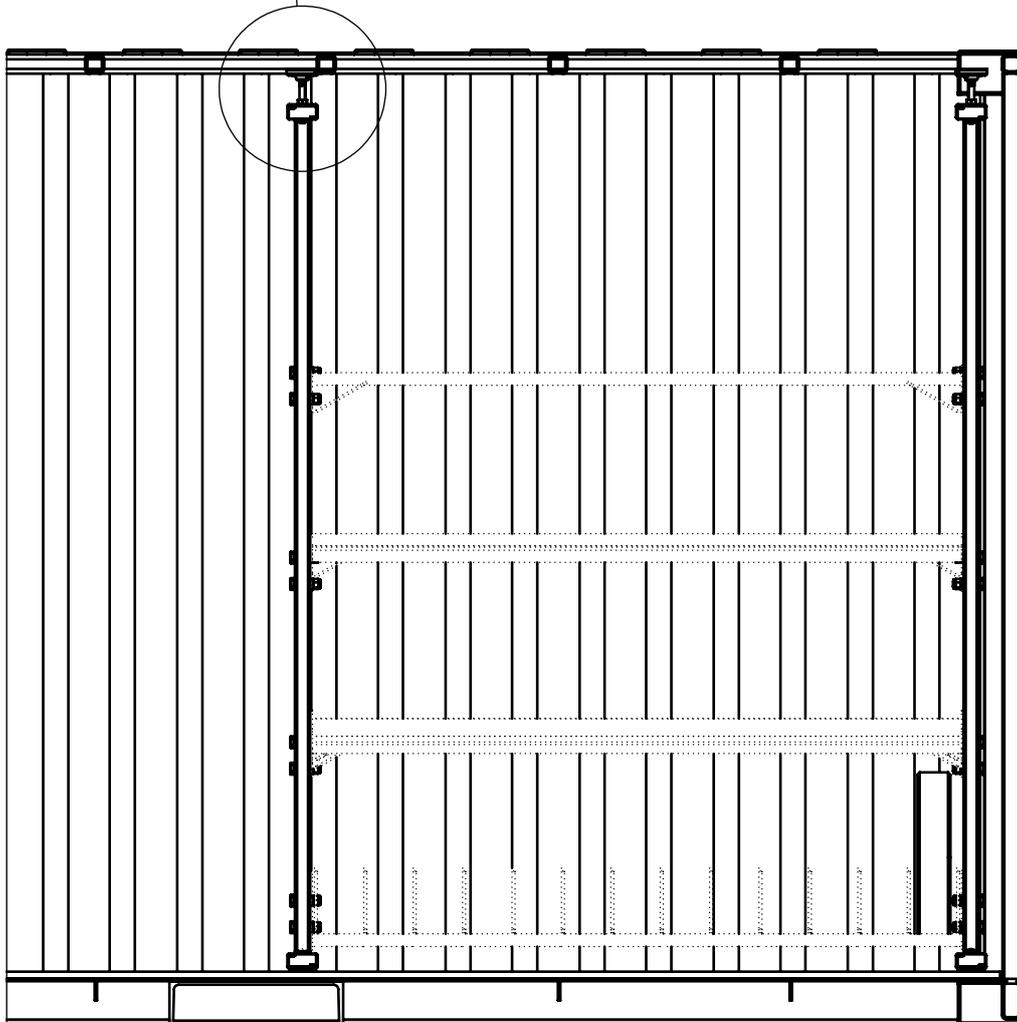

ELEIKO

RAISE THE BAR

Eleiko Group AB | Klastorpsvägen 18 | SE-302 62 HALMSTAD | Sweden
E-mail: info@eleiko.com | Phone: +46 35 17 70 70

www.eleiko.com